


Gear lever knob

To remove

0. Engage Parking Brake.

1. Engage D with the selector lever.
2. Turn the locking sleeve slightly clockwise and press down. Hold in the release button on the selector lever and pull up the knob.

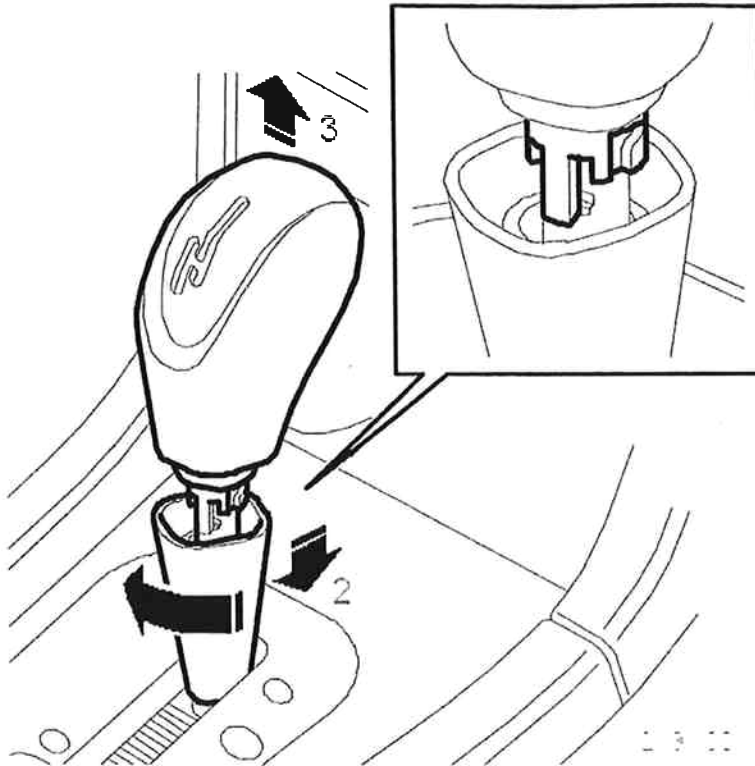


3. Lift up the locking sleeve.

To fit

1.

Fit the locking sleeve onto the selector lever.

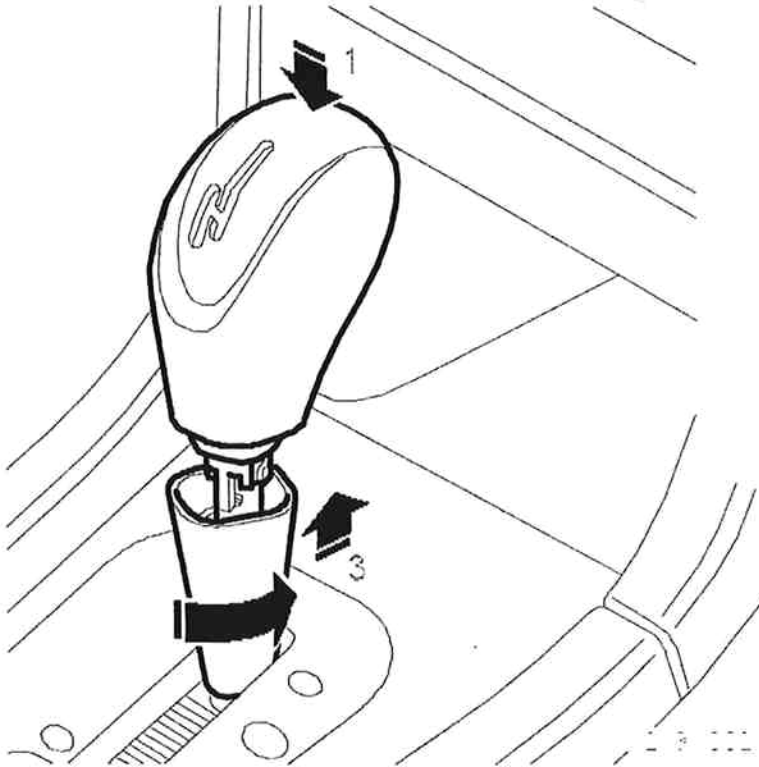

2. Move the selector lever to D. Hold in the release button and press on the selector lever knob.
3. Fit the locking sleeve to the gear lever knob in the same way as it was removed.
4. Check that the different gear positions can be engaged.