


Interior rear-view mirror


To remove

1. Remove the rear cover of the roof lighting.

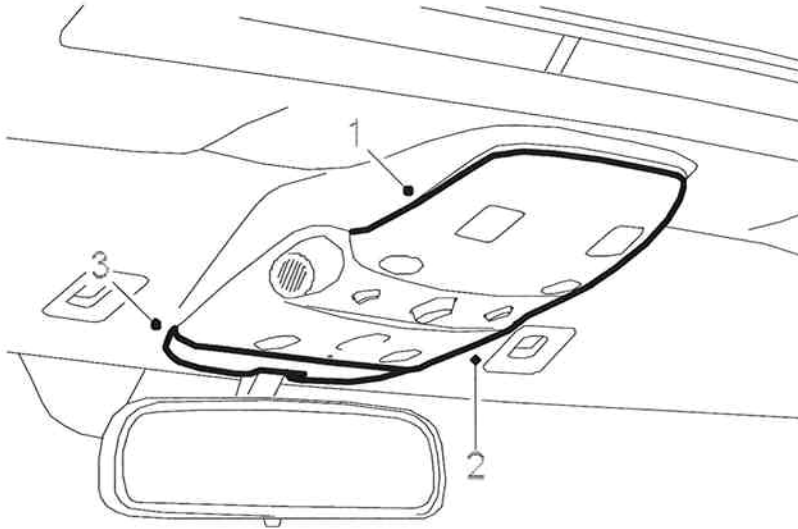

2. Remove the centre cover.
3. Remove the front cover.
- 4.

Cars with ADM:: Detach the connector from the lamp bracket.

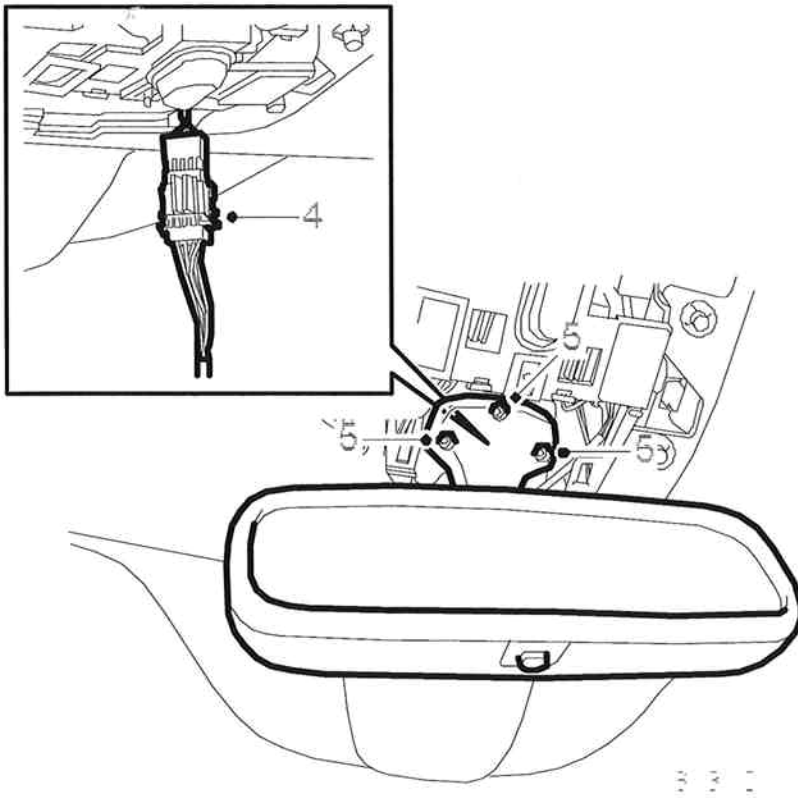

5. Remove the screws securing the rear view mirror.

6. **Cars with ADM::** Unplug the connector.

To fit


1. **Cars with ADM::** Fit the connector to the lamp bracket.

2.

Cars with ADM:: Plug in the connector.


Important

Ensure that the wires are not trapped.

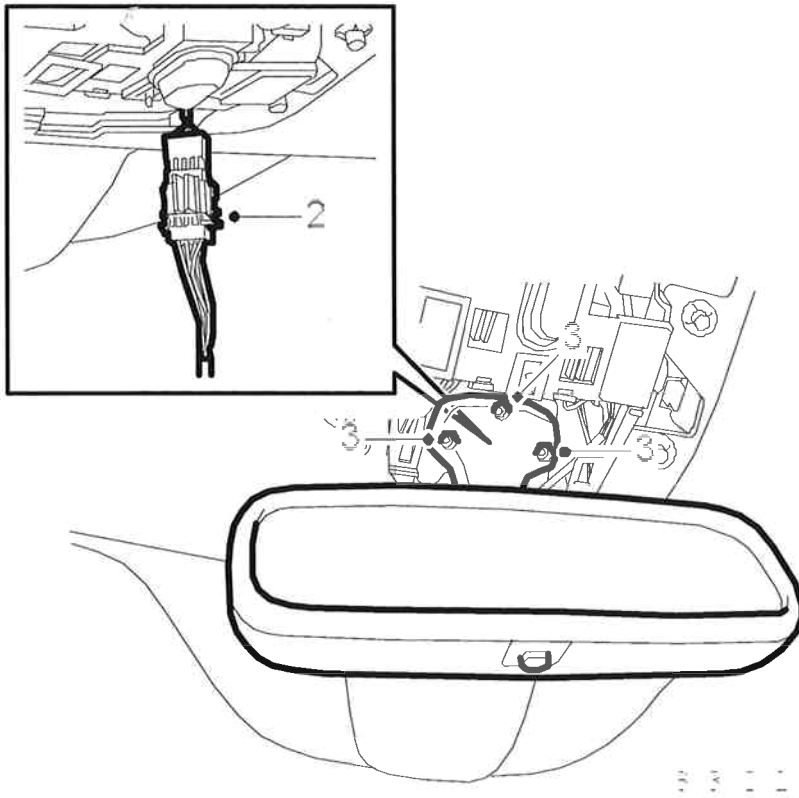

3. Position the rearview mirror and fit the screws.

4. Fit the centre cover to the roof lighting.

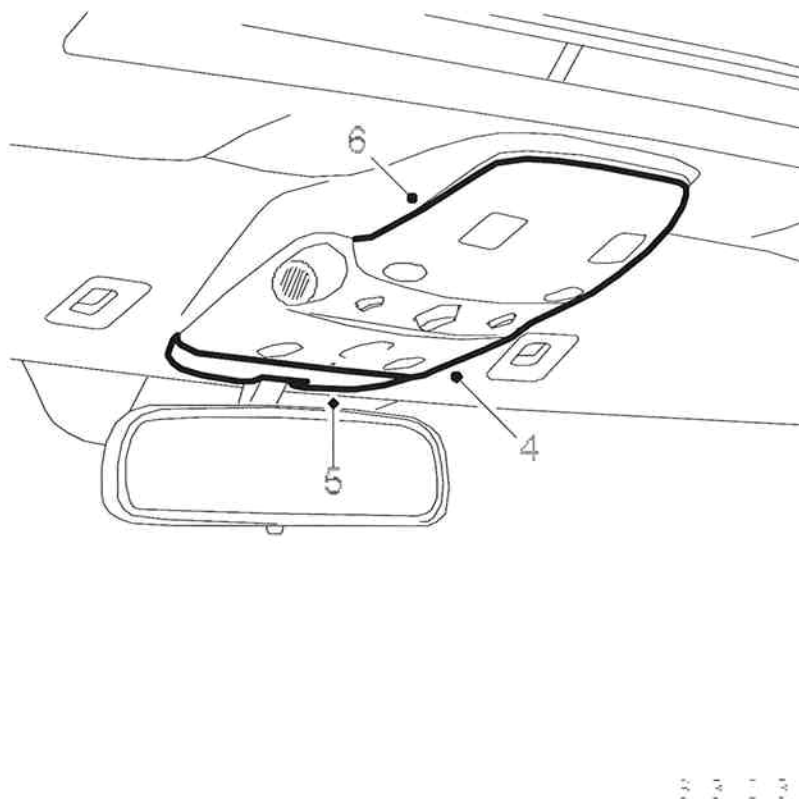



5. Fit the front cover to the roof lighting.

6. Fit the rear cover to the roof lighting.
7. Check the function of the mirror and lights.

Cars with ADM: Check the function of the automatic anti-dazzle rearview mirror.

Check procedure

1. Switch the ignition ON.
2. Make sure the auto button is depressed.

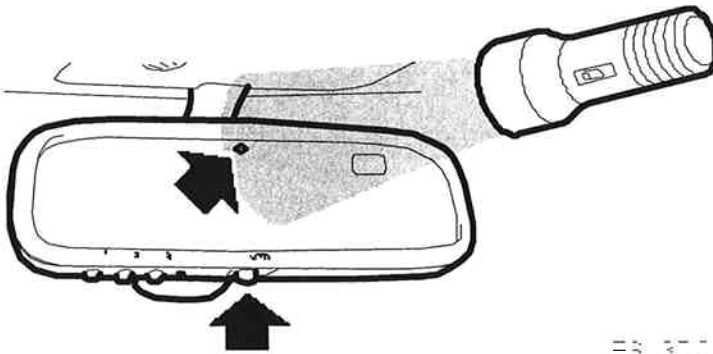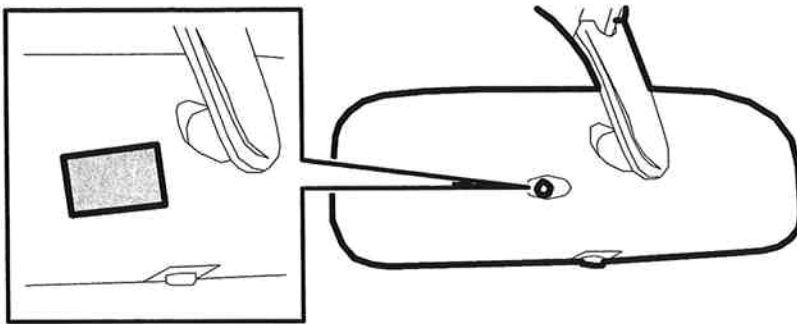

3. Place a piece of black tape or hold a finger over the front sensor.
4. Shine a torch on the rear sensor. The mirror should become gradually darker.
5. Turn off the torch and remove the tape. The mirror should now become gradually lighter.