

Scuff plate

To remove

1. Remove the scuff plate by using a removal tool to lift it up.

To fit

1. Fit by guiding in the clips and pressing them into the scuff plate.

