




**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS  
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**

## Saab 9-3, Saab 9-5

Cabin heater

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
12 791 146 12 791 147	9:87-38	Feb 02	12 795 083	

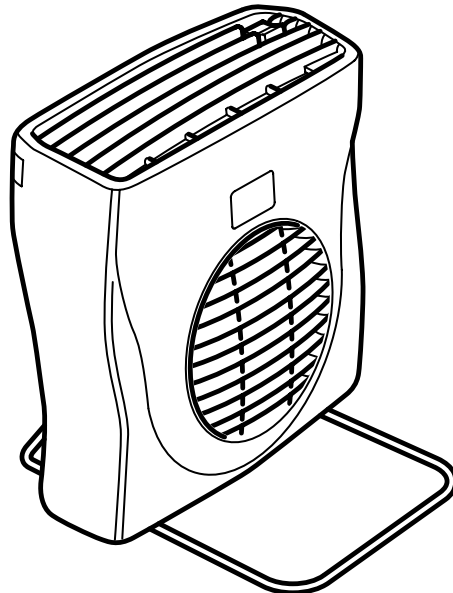

E930A122

## Technical data

Cabin heater K2 (400 127 783) can be run at 600 W (LOW) or 1500 W (HIGH).

Cabin heater K3 (400 127 791) can be run at 1250 W (LOW) or 2100 W (HIGH).

These outputs apply at -25°C and with a free flow of air. The heater element regulates power output depending on the ambient temperature and airflow through the fan.

The cabin heater has a thermostatic shut-off that cuts the power to the heater element and the fan motor should the temperature exceed the permitted limit. The thermostatic shut-off will trip if air circulation is insufficient, such as if the intake or outlet grille is covered. The fan will cease to operate if the shut-off trips.

**Cabin heater K2:** To reset the thermostatic shut-off:


- 1 Unplug the heater. Allow the heater to cool.
- 2 Depress the black button located in the heater's outlet grille.

 **WARNING**

Tools must not be used as they can damage the heater element or the thermal circuit breaker. This can cause a short circuit and a fire.

You should hear a distinct click.

**Cabin heater K3:** The thermostatic shut-off cannot be reset but must be replaced. Contact your reseller.

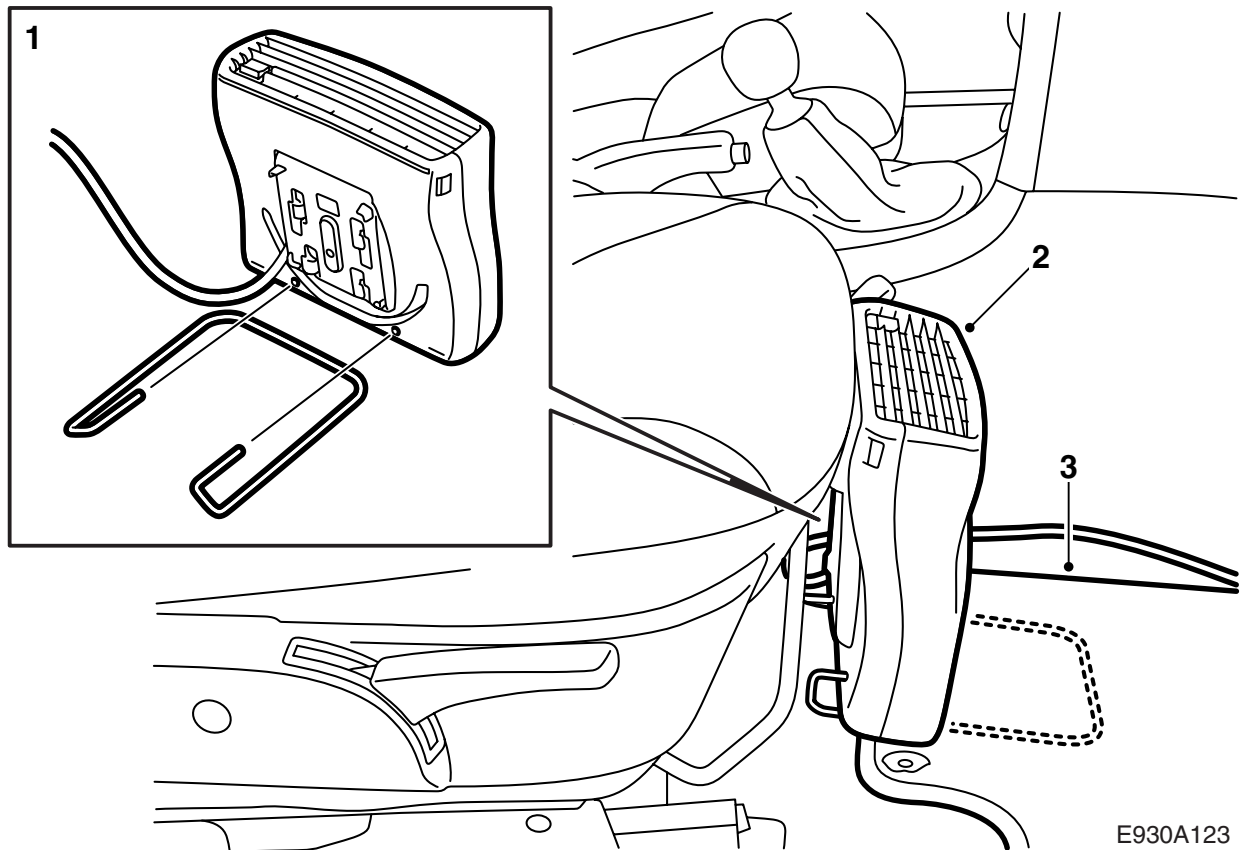

**⚠ WARNING**

The cabin heater must not be stored in the passenger compartment while the car is in use. In the event of an accident where the car rolls over, for example, the heater can be sent flying and cause serious personal injury.

- 1 Insert the wire stand into the holes on the reverse of the cabin heater.
- 2 Place the cabin heater in front of the passenger seat with the intake grille facing forward in the car.

**Important**

Place the heater so that it does not come into contact with the seat covering which may otherwise risk being worn or discoloured.

- 3 If there is a rubber or textile mat, lift this up and place it over the wire stand.
- 4 Plug in the heater and select an appropriate power setting.

## User instructions

 **WARNING**

The cabin heater must be connected to a grounded socket. The ground connection must be uninterrupted, all the way from the cabin heater, via the car's connector plug to a grounded electrical outlet.

For safe operation:

- Regularly check the integrity of the circuit between the supply connector plug's ground pin and the ground connection in the cabin socket.
- Handle all cables with care. Take special care to ensure that the cables do not get caught or trapped nor cut by sharp sheet metal parts.
- Regularly inspect the connection cable for signs of damage and aging. If the cable is damaged it must be replaced immediately.